

# **A200-TSO Installation Instructions**

## **200 Series Oil Temperature Sensor**

---

### **WARNING**

This document provides instructions for the installation of the A200-TSO Oil Temperature Sensor, Rev 1.0. Use of these instructions with any other product revision voids all warranty and certifications.

---

### **Functional Summary**

The A200-TSO is a monolithic temperature sensor to be used with 200 Series instruments that have oil temperature functionality.

### **Physical Installation**

1. Remove the existing temperature sensor from the engine.
2. Install the A200-TSO sensor in the same location as the one removed. Ensure that the supplied crush washer is in place.
3. Safety wire the sensor once installed.
4. Route the wiring cable to the instrument wiring harness making allowance for movement between the engine and engine mount.

### **Electrical Connection**

1. Connect the red/black/yellow wires from the sensor to the corresponding color wires in the instrument harness.